

# Installing Optional Backbone Adapter in E-FX-HB-xx00

MA-TX, MA-FST, MA-FSC, MA-FSM

**WARNING:** Remove AC line cord from power source before installing expansion adaptor in E-FX-HB-xx00. Failure to observe this warning could result in personal injury or death.

**CAUTION:** Wear a grounding device and observe electrostatic discharge precautions when installing Backbone Adapter in the E-FX-HB-xx00. Failure to observe this caution could result in damage to, and subsequent failure of, Backbone Adapter.

To install the backbone uplink adapter in the E-FX-HB-xx00:

1. Locate backbone uplink adapter plate at back of E-FX-HB-xx00.




Backplane Adapter Plate

2. Remove backbone uplink adapter plate by using flatblade screwdriver to remove two (2) screws that secure backbone uplink adapter plate to back of E-FX-HB-xx00.

**NOTE:** Retain screws for step 5. (Optionally discard backbone uplink adapter plate.)

3. Carefully slide backbone uplink adapter, component side up, into installation space revealed by removal of backbone uplink adapter plate.

**CAUTION:** Do NOT force connection. Failure to observe this caution could result in equipment damage and subsequent failure.

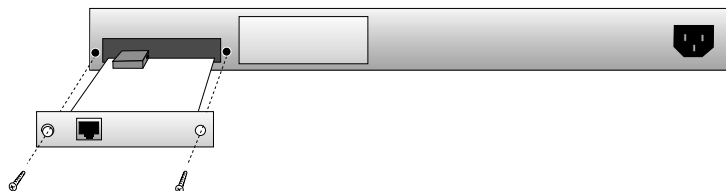

4. Press component on backbone uplink adapter securely against internal mating E-FX-HB-xx00 component until backbone uplink adapter faceplate is flat against E-FX-HB-xx00 chassis.
5. Secure backbone uplink adapter by installing retained screws through backbone uplink adapter into E-FX-HB-xx00 chassis.

**NOTE:** Refer to E-FX-HB-xx00 User's Guide for cabling instruction.